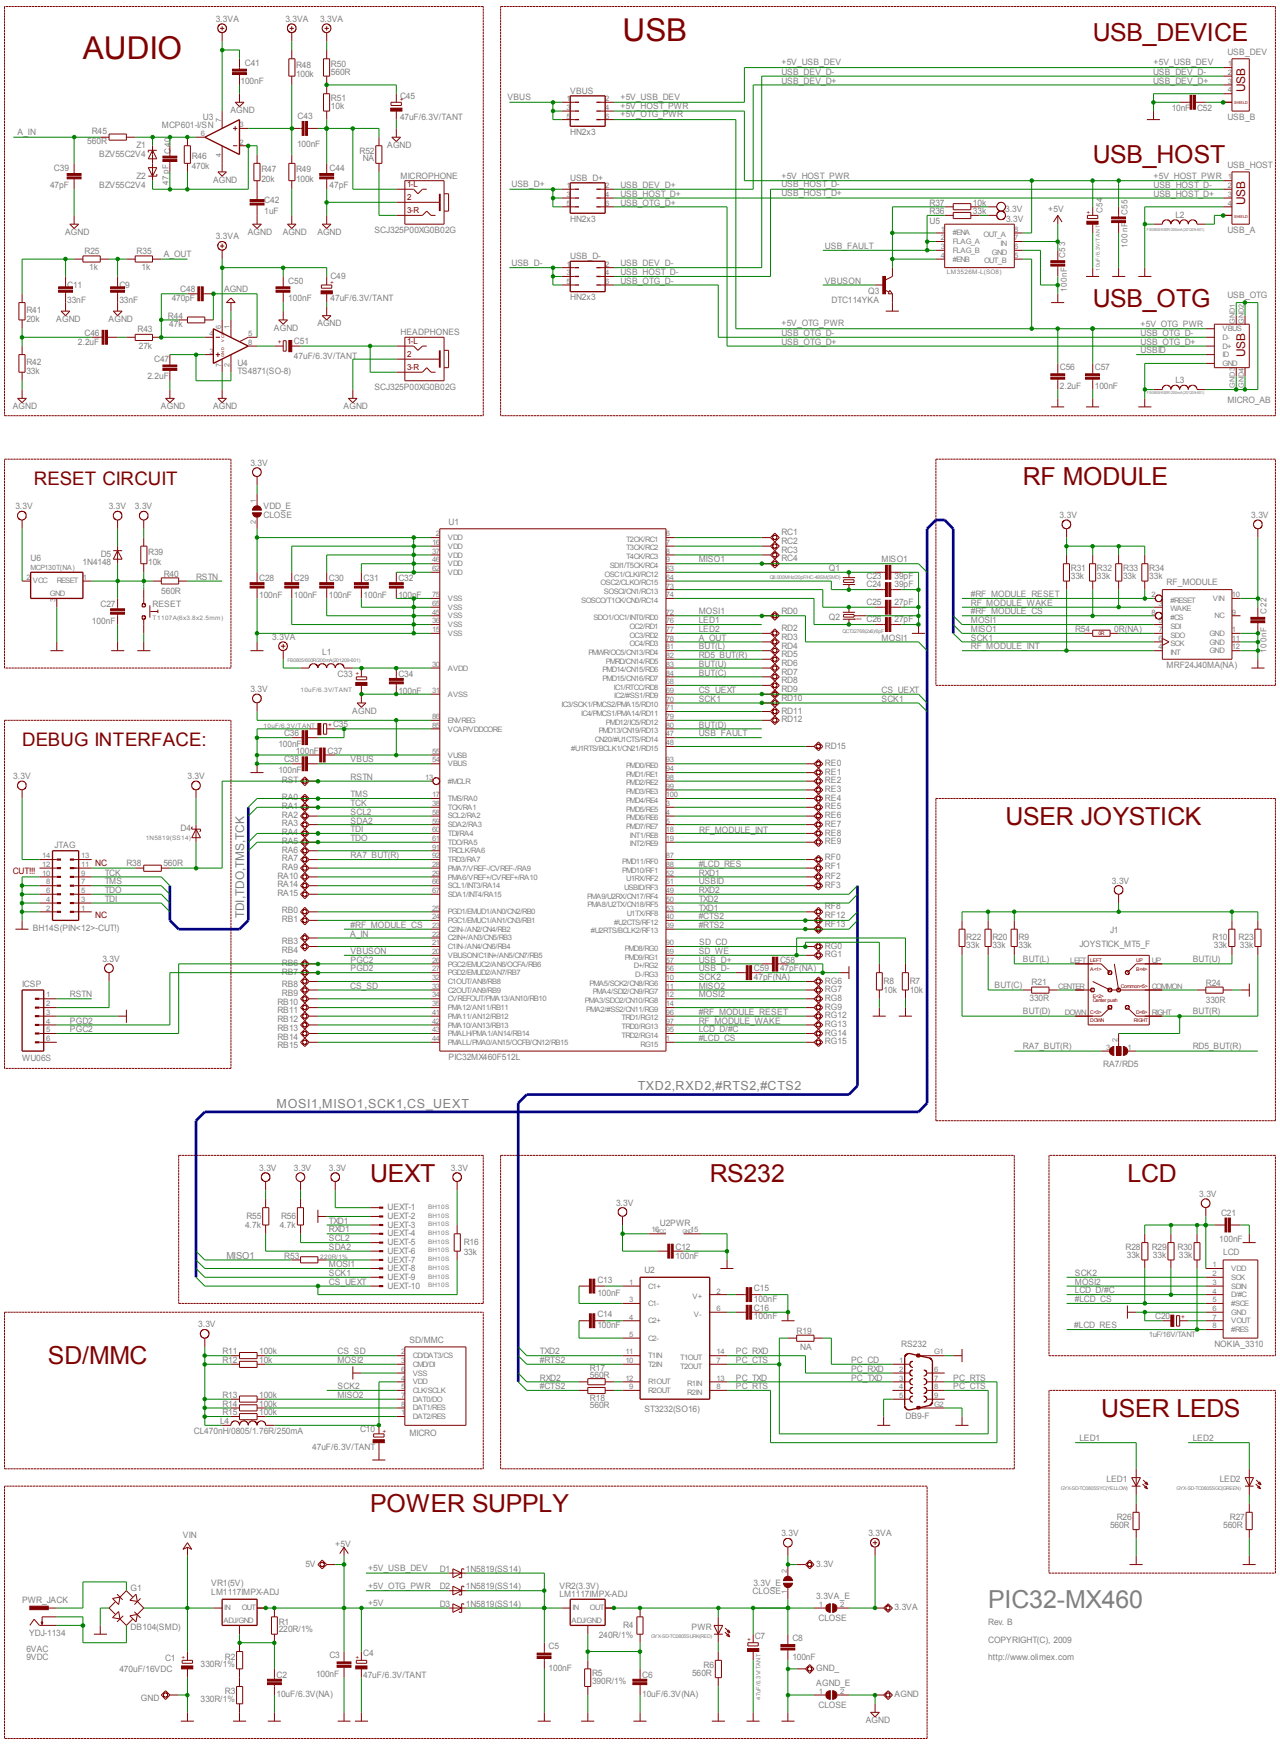
AUDIO
USB
USB_DEVICE
USB_HOST
USB_OTG
RESET CIRCUIT
DEBUG INTERFACE:
RF MODULE
USER JOYSTICK
UEXT
RS232
LCD
SD/MMC
USER LEDS
POWER SUPPLY
PIC32-MX460
Rev. B
COPYRIGHT(C), 2009
http://www.olimex.com
TXD2,RXD2,#RTS2,#CTS2
MOSI1,MISO1,SCK1,CS_UEXT
TDI,TDO,TMS,TCK